

# AIRENCE EXTENDER REMOTE JACK

The following actions are possible with the remote jack on the Extender unit.

1. Tip to sleeve (housing of the jack) = Cough which means that the audio to the left/right master is interrupted.
2. Ring to sleeve (housing of the jack) = Comm (the audio to the left/right master is interrupted + the CUE is activated to listen to that channel by the engineer).