


GSM-LINK wiring to the AIRLITE MK2

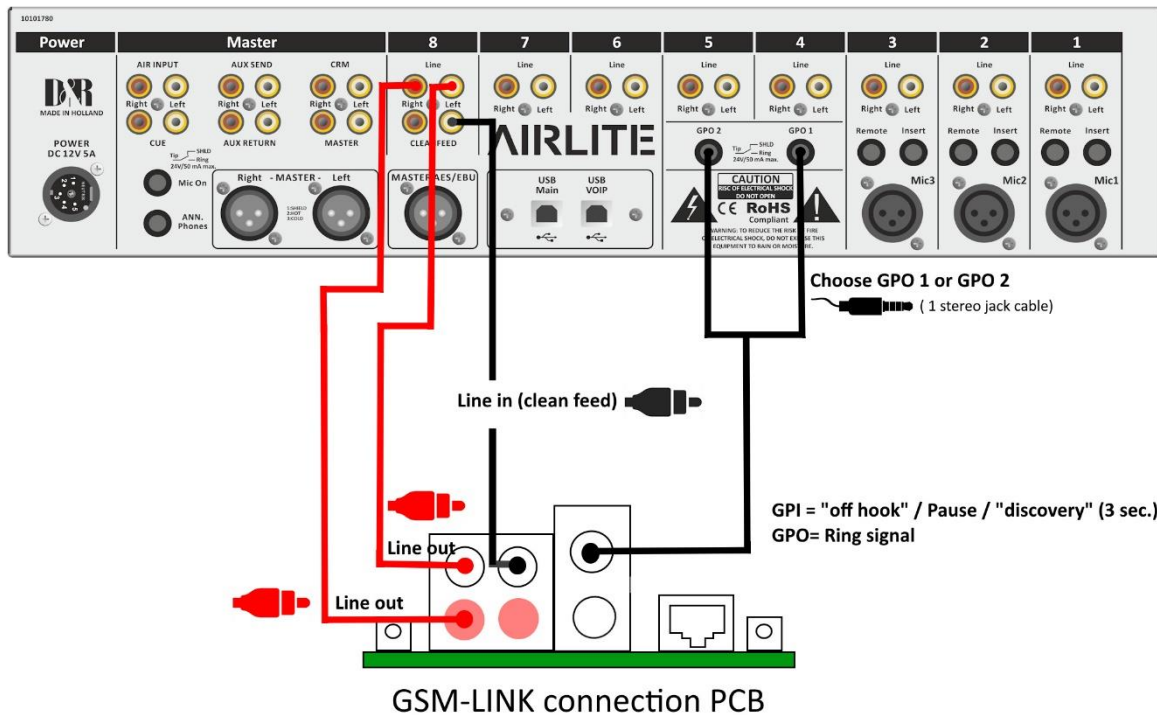

Settings of the Configuration Manager software of the Airlite MK2:

Channel 8: activate "On-Air enable by Line" for GPO 1 or 2.

Channel 8 of the Airlite MK2 has to be selected "Line in" to connect to the GSM-LINK unit.

The GPO of the GSM-LINK can drive an On-Air light, it has no GPI for this purpose.

